

LED REMOTE

functions and modes

Make sure that the black sensor dangles just below the header of your water feature so the IR sensor is exposed. On the remote, remove the plastic strip at the bottom which protrudes from under the battery cover. This will engage the battery and activate your remote. You must stand within a 12' range to engage the LED lighting via remote. For all functions, you must aim the remote directly in line with the sensor, then press and hold the button you wish to activate.

